

GLP impression X4 S CW/WW
DMX Layout

Channel	Function	Value	DMX
1	Pan Coarse	MSB	0-255
2	Pan Fine	LSB	0-255
3	Tilt Coarse	MSB	0-255
4	Tilt Fine	LSB	0-255
5	Cold White	0-100%	0-255
6	Warm White	0-100%	0-255
7	Shutter	Shutter Closed	0-15
		Shutter Pulse Random	16-47
		Fade up, snap off, random pattern	48-79
		Snap on, fade down, random pattern	80-111
		Fade up, fade down, random pattern	112-143
		Strobe with pause	160-199
		Strobe Slow-Fast	200-239
	Shutter Open	240-255	
8	Dimmer	0-100%	0-255
9	Reset	No Function	0-99
		Change PWM Frequency	100-200
		No Function	201-249
		Reset	250-255
10	Pan / Tilt Macro	No Macro	0
		Various movement macros	1-255
11	Pan / Tilt Macro Speed	Pan / Tilt speed from controller	0-1
		Movement slow--fast. Use this channel for movement speeds.	2-255
12	Zoom	Wide - Narrow	0-255
13	Pattern	No Pattern	0-2
		Pre-defined patterns	3-253
		Activates direct access to pixels (Ch. 14)	254-255
14	User Pattern	Direct access to pixels 1-7	0-255